产品规格书

Product specification

锂电池主动均衡保护板

Lithium battery active balancing protection board

JK-QB2A8S-20P

版本：19.2.1

Version: 19.2.1

成都极空科技有限公司

Chengdu Jikong Technology Co., Ltd

1. 产品概述(Product Overview) 5
1.1. BMS概述(BMS Overview) 5
1.2. 功能特性(Functional characteristics) 6
1.3. 结构框图(Structural block diagram) 7
2. 产品选型指南(Product selection guide) 8
2.1. 产品功能配置表(Product function configuration table) 8
2.2. 产品适配指南(Product adaptation guide) 9
2.3. 功能选配指南(Function selection guide) 9
3. 功能介绍及使用说明(Function introduction and usage instructions) 10
3.1. 主动均衡(Active equalization) 10
3.2. UART&显示屏接口(UART&Display interface) 10
3.3. 加热功能(Heating function) 11
3.4. 报警和风扇控制功能(Alarm and fan control functions) 11
3.5. 充电检测功能(Charge detection function) 11
3.6. 充电过压保护及恢复(Charge overvoltage protection and recovery) 12
3.7. 放电欠压保护及恢复(Discharge undervoltage protection and recovery) 12
3.8. 充电过流保护及恢复(Charge overcurrent protection and recovery) 12
3.9. 放电过流保护及恢复(Discharge overcurrent protection and recovery) 13
3.10. 过温保护及恢复(Over temperature protection and recovery) 13
3.11. 低温保护及恢复(Low temperature protection and recovery) 13
3.12. 短路保护及恢复(Short circuit protection and recovery) 14
3.13. 放电预充功能(Discharge precharge function) 14
3.14. 应急开关(Emergency switch) 15
3.15. 智能休眠(Intelligent sleep) 15
3.16. 通信功能(Communication function) 15
3.17. 充电限流功能(Charge current limiting function) 15
4. 主要参数 (Main parameter) 17
4.1. 基本参数(Basic parameter) 17
4.2. 默认参数(Default parameters) 18
5. 接口定义(Interface definition) 20
5.1. 产品外形(Product Appearance) 20
5.2. 产品尺寸(Product size) 24
5.3. 安装方法 (Installation method) 25
6. 设备使用说明(APP operation Instructions) 26
6.1. APP安装（APP installation） 26

6.2. 设备激活(Device activation) 27
6.3. 参数设置(Parameter setting) 27

版本修改记录

修订日期	版本号	修订概要	作者
2025.06.18	V19.2.1	首次发布	张海艳

1. 产品概述(Product Overview)

1.1. BMS概述(BMS Overview)

锂电池智能保护板是为大容量串联锂电池组量身打造的管理系统，具备电压采集、大电流主动均衡、过充过放过流过温保护、库仑计、蓝牙通信、GPS 远程等功能。可适用于磷酸铁锂、三元锂等电池种类。

Lithium battery intelligent protection board is a management system tailored for large capacity series lithium battery pack, with voltage acquisition, high current active balancing, overcharge over pass temperature protection, coulomb meter, Bluetooth communication, GPS remote and other functions. Can be applied to lithium iron phosphate, ternary lithium battery type.

保护板依托具备自主知识产权的能量转移式主动均衡技术，可以实现最大持续 2A 的均衡电流。大电流主动均衡技术可以最大程度的保证电池一致性、提高电池续航里程、延缓电池衰老。

The protection board relies on the energy transfer active balancing technology with independent intellectual property rights, which can achieve A maximum continuous 2A balance current. The high current active equalization technology can ensure the consistency of the battery to the greatest extent, improve the battery range and delay the aging of the battery.


保护板有配套的手机APP，支持 Android 和 IOS 操作系统。APP 可以通过手机蓝牙连接到保护板以查看电池工作状态、修改保护板的各项工作参数、控制充放电开关等等。保护板体积小、操作简单、功能全，可广泛应用于小型观光车、代步车、共享汽车、大功率储能、基站备用电源、太阳能电站等产品的电池 PACK。

The protection board has a mobile APP supporting Android and IOS operating systems. The APP can be connected to the protection board through the Bluetooth of the mobile phone to check the working status of the battery, modify the working parameters of the protection board, control the charge and discharge switch, and so on. The protection board is small in size, simple in operation and full in function, and can be widely used in battery packs of small sightseeing vehicles, mobility scooters, shared cars, high-power energy storage, base station backup power supply, solar power stations and other products.

1.2. 功能特性(Functional characteristics)

●LED蓝牙状态指示	**●LED Bluetooth status indicator**
●APP蓝牙远程操作	**●APP Bluetooth remote operation**
●电池容量计算	**●Battery capacity calculation**
●高精度电压采集(±3mV)	**●High precision voltage acquisition (±3mV)**
●高精度电流采集	**●High precision current acquisition**
●支持信息屏幕显示	**●Support information screen display**
●精准时间日志记录	**●Accurate time logging**
●支持CAN通信(选配)	**●Support CAN communication(Optional)**
●支持RS485通信(选配)	**●Support RS485 communication(Optional)**
●支持加热功能	**●Support heating function**
●支持UART接口	**●Support UART interface**
●支持报警和风扇控制功能(选配)	**●Support alarm and fan control functions(Optional)**
●放电预充功能	**●Discharge precharge function**
●充电过流保护	**●Charge overcurrent protection**
●充电过压保护	**●Charge overvoltage protection**
●充电过温保护	**●Charge over temperature protection**
●充电低温保护	**●Low temperature protection during charge**
●放电过流保护	**●Discharge overcurrent protection**
●放电欠压保护	**●Discharge undervoltage protection**
●放电过温保护	**●Discharge over temperature protection**
●短路保护	**●Short circuit protection**
●强启放电功能	**●Force on discharge function**
●充电限流功能	**●Charge current limiting function**
●充电检测功能	**●Charge detection function**

1.3. 结构框图(Structural block diagram)

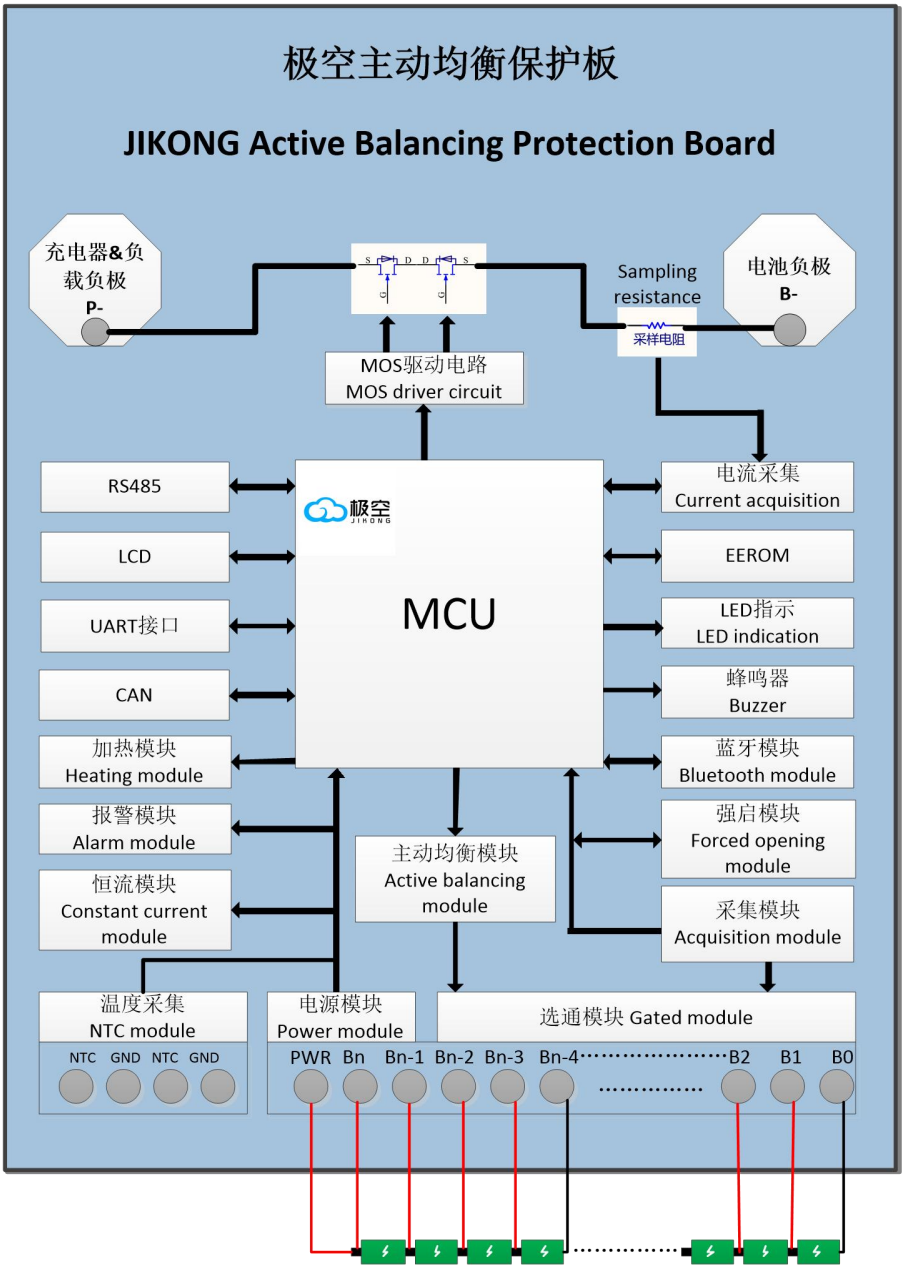

JK-QB2A8S-20P 结构框图

JK-QB2A8S-20P structure block diagram

2. 产品选型指南(Product selection guide)

2.1. 产品功能配置表(Product function configuration table)

产品规格 (Product specification)	JK-QB2A8S-20P	
序号 (Serial number)	功能 （Function）	配置 （Configuration）
1	主动均衡电流 (Active equalizing current)	2A
2	蓝牙功能 (Bluetooth function)	标配 (Standard option)
3	UART接口 (UART interface)	标配 (Standard option)
4	NTC数量 (NTC quantity)	1路内置，4路外置 (1 built-in, 4 external)
5	RS485	选配 (Optional)
6	CAN	选配 (Optional)
7	显示屏接口 (Display interface)	标配 (Standard option)
8	加热功能 (Heating function)	标配 (Standard option)
9	报警和风扇控制功能 (Support alarm and fan control functions)	选配 (Optional)
10	充电过压、过流保护 (Charging overvoltage, overcurrent protection)	标配 (Standard option)
11	放电预充功能 (Discharge precharge function)	标配 (Standard option)
12	放电欠压、过流保护 (Discharge under voltage, over currentprotection)	标配 (Standard option)
13	短路保护 (Short circuit protection)	标配 (Standard option)
14	强启放电功能 (Force on discharge function)	标配 (Standard option)
15	强启加热功能 (Force on heating function)	标配 (Standard option)
16	充电限流功能 （Charge current limiting function）	标配 (Standard option)
17	充电检测功能 （Charge detection function）	标配 (Standard option)

2.2. 产品适配指南(Product adaptation guide)

序号 (Serial number)	产品规格 （Product specification）	电池类型 （Battery type）	适配串数 （Number of adaptive battery strings）
1	**JK-QB2A8S-20P**	三元锂电池 (Ternary lithium battery)	3-8
		铁锂电池 (Lithium iron battery)	3-8
		钛酸锂电池 (Lithium titanate battery)	7-8

2.3. 功能选配指南(Function selection guide)

序号 (Serial number)	电池串数 （Battery string）	选配功能 (Optional function)	产品型号 (Product model)
1	3～8	标配 (Standard option)	**JK-QB2A8S-20P**
2		标配+CAN通信 (Standard+CAN communication)	**JK-QB2A8S-20PC**
3		标配+RS485通信 (Standard+RS485 communication)	**JK-QB2A8S-20PR**
4		标配+CAN通信+RS485通信 （Standard +CAN communication+RS485 communication）	**JK-QB2A8S-20PCR**

3. 功能介绍及使用说明(Function introduction and usage instructions)

3.1. 主动均衡(Active equalization)

保护板采用主动均衡技术，均衡的原理是将高电压的电芯能量转移到低电压的电芯中，通过保护板这一媒介实现能量转移。用户在使用均衡功能之前需要设置电池基本参数，需要下载极空BMS-APP，下载之后在极空APP中参数设置页面设置电池类型，默认参数见第四章。设置完成电池类型后在常用设置中设置电池基本参数，包括单体数量、电池容量、触发均衡压差(可保持默认)、电压校准、电流校准等。

The protection board adopts active equalization technology, and the principle of equalization is to transfer the energy of the high-voltage cell to the low-voltage cell, and realize the energy transfer through the medium of the protection board. Before using the balancing function, users need to set the basic parameters of the battery and download the BMS-APP. After downloading, set the battery type on the parameter setting page of the APP. For default parameters, see Chapter 4.After setting the battery type, set basic battery parameters in common Settings, including the number of cells, battery capacity, trigger equalization differential pressure (the default value can be retained), voltage calibration, and current calibration.

用户可在APP的参数设置中自行设置均衡触发压差(mV)，均衡打开时，当电池包中任意两串电池压差大于设定值时均衡自动打开，压差小于设置值后关闭 。默认均衡电流为最大值2A，用户可根据自己电池容量来调整，建议均衡电流不超过电池容量(C)的0.2C。如无需均衡功能，可在APP的BMS控制页中将均衡开关设置为关闭状态。

Users can set the balance trigger pressure difference (mV) in the parameter setting of the APP. When the balance is turned on, the balance will be turned on automatically when the pressure difference of any two strings of batteries in the battery pack is greater than the set value, and the balance will be turned off when the pressure difference is less than the set value. The default balance current is 2 A. Users can adjust the balance current according to their own battery capacity. It is recommended that the balance current not exceed 0.2C of the battery capacity (C). If you do not need the balancing function, you can set the balancing switch to off in the BMS control page of the APP.

3.2. UART&显示屏接口(UART&Display interface)

保护板预留UART接口，支持用户自行选配GPS，可以满足个人以及企业用户对于电池定位的需求。同时保护板预留了显示屏接口，支持用户选配我司显示屏，方便查看电池信息，用户可根据实际需求进行选配。

The protection board reserves a UART port, enabling users to select a GPS device to meet the battery location requirements of individuals and enterprises. At the same time, the protection board is reserved for the display interface, supporting users to select our display, convenient to view the battery information, users can select according to actual needs.

3.3. 加热功能(Heating function)

保护板标配加热功能，在低温条件下通过电阻加热器或加热膜来为电池加热，避免因低温导致的电池活性降低而无法充放电，设计加热电流为20A，用户可根据实际需求选配此功能以及功率匹配的加热设备。 此功能用户可根据自己所处的的气温实际情况在极空APP中的BMS控制页进行开关操作。同时建议在加热回路中 串联一个温控开关作为二级保护，防止极端情况出现热失控。建议选择45℃～65℃常闭型温控开关，当温度达到温控开关阈值后温控开关断开，切断加热回路防止继续加热。

在基础加热功能的基础上保护板拓展了强制启动加热功能，简称强启加热功能。当外界条件不满足加热所需条件时(插入充电器且触发低温充电保护)低温下用户需要加热时，用户可以按下外部强制加热开关来开启加热。

The protection board is equipped with heating function as standard. The resistance heater or heating film is used to heat the battery at low temperature to avoid the failure of charging and discharging due to the decrease of battery activity caused by low temperature. The designed heating current is 20A. This function allows users to switch operations in the BMS control page of the APP according to their actual temperature. At the same time, it is recommended to series a temperature control switch in the heating circuit as a secondary protection to prevent thermal runaway in extreme cases. You are advised to select a normally closed temperature switch of 45 ° C to 65 ° C. When the temperature reaches the threshold of the temperature switch, the temperature switch isturned off and the heating circuit is cut off to prevent further heating.

The protection board is equipped with the forced start heating function, referred to as the forced start heating function. When the external conditions do not meet the conditions required for heating (insert the charger and trigger the low-temperature charging protection), when the user needs to heat at low temperature, the user can press the external forced heating switch to turn on the heating.

3.4. 报警和风扇控制功能(Alarm and fan control functions)

保护板选配报警和风扇控制功能，在BMS检测到电池处于过温、过充、过放等状态时报警接口可输出12V电压来驱动报警器报警或者驱动风扇降温，触发报警条件只能选择其中一项，切换触发报警条件后需要用户根据自身需求对条件进行设置。

Protective board with optional alarm and fan control functions. When the BMS detects that the battery is in the state of overtemperature, overcharge, overdischarge, etc., the alarm interface can output 12V voltage to drive the alarm alarm or drive the fan to cool down. Only one of the triggering alarm conditions can be selected.

3.5. 充电检测功能(Charge detection function)

保护板标配充电检测功能，可用于使能充电。C_detect+和C_detect-接口，分别接充电器输出的12V电压信号正负极，该检测接口可用于使能充电。

The protective board comes standard with a charging detection function, which can be used to enable

charginng. C_detect+ and C_detect- interfaces are respectively connected to the positive and negative terminals of the 12V voltage signal output of the charger. The detection interface can be used to enable charging.

3.6. 充电过压保护及恢复(Charge overvoltage protection and recovery)

保护板标配充电过压保护，用户可以在极空APP中的参数设置页中自行设置单体过充保护电压以及单体过充恢复电压，电池充电时当任意一串电池出现过压后保护板将关闭充电来保护电池，当所有单体电压均低于单体过充恢复电压之后保护板再次开启充电，以防止电池过充从而损坏电芯。

The protection board is equipped with charge overvoltage protection as standard. Users can set the single overcharge protection voltage and single overcharge recovery voltage in the parameter setting page of the APP. When any string of batteries is overvoltage during battery charging, the protection board will turn off the charging to protect the battery. To prevent the battery from overcharging and damaging the cell.

3.7. 放电欠压保护及恢复(Discharge undervoltage protection and recovery)

保护板标配放电欠压保护功能，用户可以根据自身电池类型在极空APP中的参数设置页设置电池欠压保护电压(V)、电池欠压恢复电压(V)、自动关机电压(V)。当保护板处于放电状态时，当任意一串电池的电压低于设置的欠压保护电压值，保护板触发欠压保护同时关闭放电来保护电芯，防止过放损坏电芯。当电池充电至所有单体电芯电压均高于欠压恢复电压时，欠压保护解除将再次打开放电。当电池任意一串电芯的电压低于自动关机电压时，保护板将自动关机来保护电芯。

The protection board is equipped with discharge undervoltage protection function as standard. Users can set battery undervoltage protection voltage (V), battery undervoltage recovery voltage (V) and automatic shutdown voltage (V) in the parameter setting page of the APP according to their own battery type. When the protection board is in the discharge state, when the voltage of any string of batteries is lower than the set undervoltage protection voltage value, the protection board triggers the undervoltage protection and closes the discharge at the same time to protect the battery cell and prevent overdischarge from damaging the battery cell. When the battery is charged until the voltage of all individual cells is higher than the undervoltage recovery voltage, the undervoltage protection release will turn on the discharge again. When the voltage of any string of batteries is lower than the automatic shutdown voltage, the protection board will automatically shut down to protect the battery.

3.8. 充电过流保护及恢复(Charge overcurrent protection and recovery)

保护板标配充电过流保护功能，用户可以根据自身电池容量以及充电器输出电流自行在极空APP中的参数设置页设置持续充电电流(A)、充电过流延时(S)、充电过流解除(S)。当充电电流大于设置的持续充电电流时，经过设置的充电过流延时时间后触发充电保护，保护板关闭充电，经过充电过流解除时间后保护板将再次打开充电。

The protection board is equipped with the charging overcurrent protection function as standard. Users can set the

continuous charging current (A), charging overcurrent delay (S) and charging overcurrent release (S) in the parameter setting page of the APP according to their own battery capacity and the output current of the charger. When the charging current is greater than the set continuous charging current, the charging protection will be triggered after the set charging overcurrent delay time, and the protection board will close the charging, and the protection board will open the charging again after the charging overcurrent release time.

3.9. 放电过流保护及恢复(Discharge overcurrent protection and recovery)

保护板标配放电过流保护功能，用户可以根据自身电池容量以及负载输出电流自行在极空APP中的参数设置页设置持续放电电流(A)、放电过流延时(S)、放电过流解除(S)。当放电电流大于设置的持续放电电流时，经过设置的放电过流延时时间后触发放电过流保护，保护板关闭放电，经过放电过流解除时间后保护板将再次打开放电。(注意：最大可设置持续放电电流不可超过标称电流200A)

The protection board is equipped with the discharge overcurrent protection function as standard. Users can set the continuous discharge current (A), discharge overcurrent delay (S) and discharge overcurrent release (S) in the parameter setting page of the APP according to their own battery capacity and load output current. When the discharge current is greater than the set continuous discharge current, the discharge overcurrent protection is triggered after the set discharge overcurrent delay time, and the protection board closes the discharge. After the discharge overcurrent release time, the protection board starts the discharge again. (Note: The maximum continuous discharge current can not exceed the nominal current of 200A)

3.10. 过温保护及恢复(Over temperature protection and recovery)

保护板标配充放电过温保护功能，用户可以根据自身需求在极空APP中的参数设置页设置充电过温保护(℃)、充电过温恢复(℃)、放电过温保护(℃)、放电过温恢复(℃)。当保护板采集到的温度数据高于设置的设置的充电过温保护值时，保护板关闭充电，当温度恢复到低于设置的充电过温恢复值以下时再次打开充电，放电过温保护以及恢复同理。

The protection board is equipped with charge and discharge overtemperature protection function as standard. Users can set charge overtemperature protection (℃), charge overtemperature recovery (℃), discharge overtemperature protection (℃), and discharge overtemperature recovery (℃) on the parameter setting page of the APP according to their own needs. When the temperature data collected by the protection board is higher than the set charge overtemperature protection value, the protection board shuts down the charging, and turns on the charging again when the temperature is lower than the set charge overtemperature recovery value. The same applies to the discharge overtemperature protection and recovery.

3.11. 低温保护及恢复(Low temperature protection and recovery)

保护板标配充充电低温保护功能，用户可以根据自身需求在极空APP中的参数设置页设置充电低温保护(℃)、充电低温恢复(℃)。当保护板采集到的温度数据低于设置的设置的充电低温保护值时，保

护板关闭充电，当温度恢复到高于设置的充电低温恢复值时再次打开充电，建议冬天极寒地区的用户选配加热功能以便更好的保护电芯。

The protection board is equipped with charging low temperature protection function as standard. Users can set charging low temperature protection (℃) and charging low temperature recovery (℃) in the parameter setting page of the APP according to their own needs. When the temperature data collected by the protection board is lower than the set charging low temperature protection value, the protection board closes the charging, and turns on the charging again when the temperature returns to higher than the set charging low temperature recovery value. It is recommended that users in extremely cold areas in winter choose the heating function to better protect the battery cell.

3.12. 短路保护及恢复(Short circuit protection and recovery)

保护板标配短路保护功能，此项参数无需用户自行设置触发短路保护的电流，用户如果需要可以根据自身需求在极空APP中的参数设置页设置短路保护延时(us)以及短路保护恢复时间(S)。当用户首次连接充电器充电时，外部线路正确连接后，在BMS控制页中打开充电后若触发充电短路保护，可以增大短路保护延时，导致保护的原因为充电器开启输出瞬间峰值电流过大引起，此时经过短路保护恢复时间后短路保护解除，保护板打开充电。当用户初次连接负载使用时出现放电短路保护后，在确保外部接线不存在短路时可通过增加短路保护延时来解决，因为部分负载内部的电容较大导致开启瞬间电流可能较大会导致触发短路保护，此时经过短路保护恢复时间后短路保护解除，保护板打开放电。

The protection board is equipped with the short circuit protection function as standard. The user does not need to set the current that triggers the short circuit protection by himself. If necessary, the user can set the short circuit protection delay (us) and short circuit protection recovery time (S) on the parameter setting page of the APP. When the user connects the charger for the first time to charge, if the charging short circuit protection is triggered after the external line is correctly connected in the BMS control page, the short circuit protection delay can be increased. The cause of the protection is that the peak current of the charger is too large when the charger is turned on and output. In this case, the short circuit protection is lifted after the short circuit protection recovery time, and the protection board is turned on and charged. When the user is connected to the load for the first time, the discharge short-circuit protection occurs, and the short-circuit protection delay can be increased to ensure that there is no short circuit in the external wiring. Because the capacitance inside some loads is large, the opening instantaneous current may be too large, which may trigger the short-circuit protection. In this case, the short-circuit protection is removed after the short-circuit protection recovery time, and the protection board is opened and discharged.

3.13. 放电预充功能(Discharge precharge function)

保护板标配放电预充功能，默认预充时间为5S，用户可以根据自身需求来选择打开或者关闭预充，预充时间为0则为关闭预充功能。

The protection board is equipped with the discharge precharge function as standard. The default precharge time is 5 seconds. You can enable or disable the precharge function based on your requirements.

3.14. 应急开关(Emergency switch)

保护板标配应急开关功能，当用户正常使用时如果出现过温、过放、过充、掉串等问题时，在极空APP中BMS控制页打开应急开关后，保护板将同时打开充放电30分钟，给予用户一个应急使用时间，在此过程中假如单体电芯电压已到达自动关机电压，保护板也将持续工作直至此次应急开关30分钟周期结束，避免出现在道路上抛锚等险情。

The protection board is equipped with the standard emergency switch function. When the user is in normal use, if there are problems such as over-temperature, over-discharge, over-charge, and drop string, the protection board will turn on the charge and discharge for 30 minutes at the same time after the emergency switch is opened on the BMS control page in the APP, giving the user an emergency use time. In this process, if the voltage of the single cell has reached the automatic shutdown voltage, the protection board will turn on the charge and discharge for 30 minutes at the same time. The protective plate will also continue to work until the end of the 30-minute emergency switch cycle to avoid dangerous situations such as breaking down on the road.

3.15. 智能休眠(Intelligent sleep)

保护板标配智能休眠功能，用户可根据自身需求在极空APP的BMS控制页选择打开或者关闭。此功能目的为在保护板处于待机状态时(连续26小时充放电电流小于1A)关闭保护板以减少保护板自身对于电池的能量消耗，当用户需要再次激活使用时可以使用按钮激活或者充电器激活即可。

The protection board is equipped with intelligent sleep function as standard, and users can choose to open or close the BMS control page of the APP according to their own needs. The purpose of this function is to close the protection board when the protection board is in standby state (the charging and discharging current is less than 1A for 26 consecutive hours) to reduce the energy consumption of the protection board itself to the battery. When the user needs to activate it again, the button can be activated or the charger can be activated.

3.16. 通信功能(Communication function)

保护板支持选配CAN、RS485通信，用户可以根据自身需求来进行选配，在使用保护板的通信功能时用户可以根据自身的使用需求以及场景自行设置保护板的地址以及通信协议，具体通信协议见极空保护板通信协议文档。

The protection board supports the optional CAN and RS485 communications.Users can select and configure the address and communication protocol of the protection board according to their own requirements and scenarios when using the communication function of the protection board. For details about the communication protocol, see the communication protocol document of the Jikong Protection Board.

3.17. 充电限流功能(Charge current limiting function)

JK-QB2A8S-20P标配充电限流功能，用户可以根据自身电池容量以及充电电流在极空APP中设置

持续充电电流(A)、充电过流延时(S)、充电过流解除时间(S)。当电池出现充电过流的情况时候启动限流功能，将充电电流恒定在10A左右以保护电池。当触发充电低温保护且充电加热30分钟仍未解除充电低温保护时，启动充电限流功能将充电电流限制到10A，以达到低温下保护电池的目的。

JK-QB2A8S-20P standard charging current limiting function, users can set continuous charging current (A), charging overcurrent delay (S), charging overcurrent release time (S) in the JIKONG APP according to their own battery capacity and charging current. When the battery is charged overcurrent, the current limiting function is started, and the charging current is constant at about 10A to protect the battery. When the charging low temperature protection is triggered and the charging low temperature protection is not lifted after 30 minutes of charging heating, the charging current limiting function is started to limit the charging current to 10A to achieve the purpose of protecting the battery at low temperature.

4. 主要参数 (Main parameter)

4.1. 基本参数(Basic parameter)

序号 (Serial number)	项目 (Project)	具体参数 (argument)	单位 (Unit)
1	供电电压 (Supply voltage)	7.5-40	V
2	运行功耗 (Operating power consumption)	1000-1400	mW
3	工作温度(Operating temperature)	-30-70	℃
4	最大采集串数 (Maximum number of collection strings)	8	串 （S）
5	最大均衡电流 (Maximum balancing current)	2	A
6	最大充电电流 (Maximum charging current)	200	A
7	最大放电电流 (Maximum discharge current)	200	A
8	最大瞬时电流 (Maximum instantaneous current)	400	A
9	最大启动电流 (Maximum starting current)	2500	A
10	最大回路内阻 (Maximum internal loop resistance)	0.3	mΩ
11	保护板尺寸 (Protective plate size)	227*120*21.12	mm
12	成品重量 (Finished weight)	620	g


4.2. 默认参数(Default parameters)

序号 NUM	参数 PARA	三元默认 LI-ION	铁锂默认 LIFEPO4	钛酸锂默认 LTO	单位 (unit)
1	均衡起始电压 (balancing initial voltage)	3	3	2	V
2	最大均衡电流 (Maximum balancing current)	2	2	2	A
3	单体过充电压 (Unit overcharge voltage)	4.2	3.6	2.7	V
4	单体过充保护恢复 (Single overcharge protection recovery)	4.18	3.55	2.65	V
5	单体欠压保护 (Monomer undervoltage protection)	2.82	2.6	1.8	V
6	单体欠压保护恢复 (Single undervoltage protection recovery)	2.85	2.65	1.85	V
7	自动关机电压 (Automatic shutdown voltage)	2.8	2.5	1.7	V
8	SOC-0%电压 (SOC-0% voltage)	2.9	2.6	1.85	V
9	SOC-100%电压 (SOC-100% voltage)	4.18	3.5	2.65	V
10	触发均衡压差 (Trigger balancing differential pressure)	0.01	0.01	0.01	V
11	充电过流保护延时 (Charging overcurrent protection delay)	30	30	30	秒 (S)
12	充电过流保护解除时间 (Charge overcurrent protection release time)	60	60	60	秒 (S)
13	放电过流保护延时 (Discharge overcurrent protection delay)	300	300	300	秒 (S)
14	放电过流保护解除时间 (Discharge overcurrent protection release time)	60	60	60	秒 (S)
15	短路保护延时 (Short-circuit protection delay)	5	5	5	微秒 (uS)

16	短路保护解除时间 (Short circuit protection release time)	30	30	30	秒 (S)
17	充电过温保护温度 Charging overtemperature protection temperature	70	70	70	℃
18	充电过温恢复温度 (Charge overtemperature restore temperature)	60	60	60	℃
19	放电过温保护温度 (Discharge overtemperature protection temperature)	70	70	70	℃
20	放电过温恢复温度 (Discharge overtemperature recovery temperature)	60	60	60	℃
21	充电低温保护温度 (Charging low temperature protection temperature)	-20	-20	-20	℃
22	充电低温恢复温度 (Charge low temperature to restore temperature)	-10	-10	-10	℃
23	MOS 过温保护温度 (MOS Overtemperature protection temperature)	100	100	100	℃
24	MOS 过温保护恢复温度 (MOS Overtemperature protection recovery temperature)	80	80	80	℃
25	设备地址 (Device address)	0	0	0	/
26	放电预充时间 (Discharge precharge time)	5	5	5	秒 (S)

5. 接口定义(Interface definition)

5.1. 产品外形(Product Appearance)

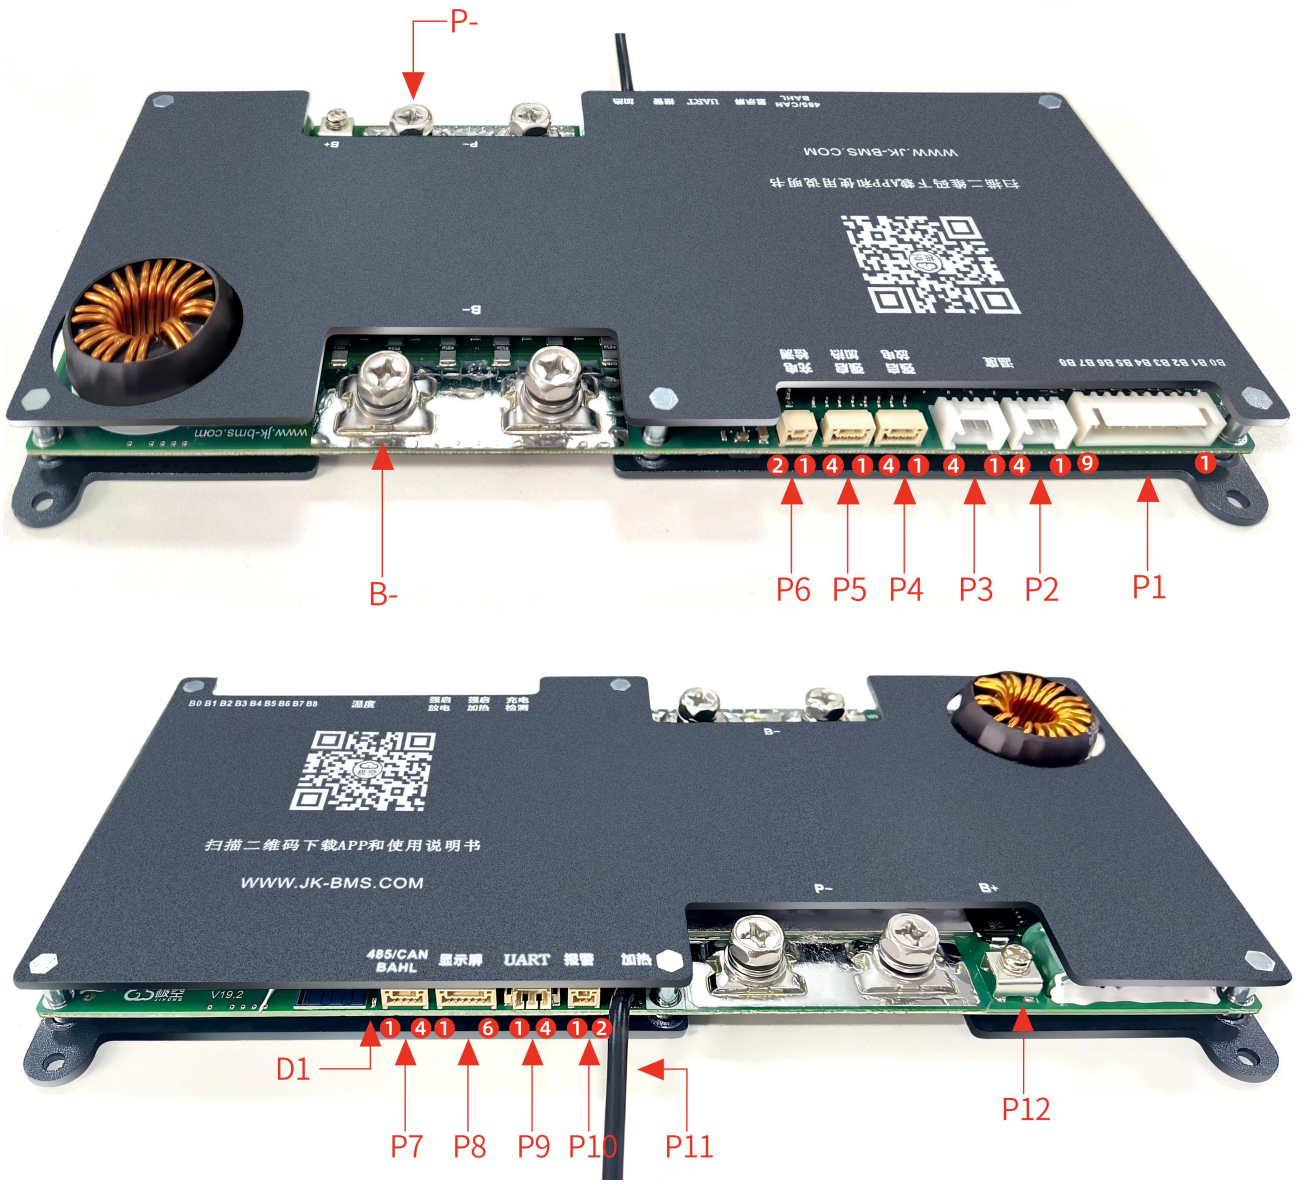

JK-QB2A8S-20P 连接器示意图

Schematic diagram of the JK-QB2A8S-20P connector

产品连接器、LED 定义(Product connector, LED definition)

接口定义(Interface definition)

连接器(coupler)	连接器型号(Type of connector)	接口名称(Interface name)	管脚号(Pin number)	JK-QB2A8S-20P	
				名称（Name）	定义(definition)
P1	XHB2.54-9P	均衡与采集接口(Balance with Acquisition interface)	1	B-	电池总负极(Total negative battery)
			2	B1	第 1 串电池正极(The first battery positives)
			3	B2	第 2 串电池正极(The second battery positive)
			4	B3	第 3 串电池正极(The third battery positive)
			5	B4	第 4 串电池正极(The fourth battery positive)
			6	B5	第 5 串电池正极(The fifth battery positive)
			7	B6	第 6 串电池正极(The sixth battery positive)
			8	B7	第 7 串电池正极(The seventh battery positive)
			9	B8	第 8串电池正极(The eighth battery positive)
P2	HY2.0-4P	温度接口(Temperature interface)	1	T1A	第 1 个温度传感器 A 管脚(First temperature sensor pin A)
			2	T1B	第 1 个温度传感器B 管脚(First temperature sensor pin B)
			3	T2A	第 2 个温度传感器 A 管脚（Second temperature sensor pin A）
			4	T2B	第 2 个温度传感器B 管脚（Second temperature sensor pin B）
P3	HY2.0-4P	温度接口(Temperature interface)	1	T3A	第 3个温度传感器 A 管脚(Third temperature sensor pin A)
			2	T3B	第 3 个温度传感器B 管脚(Third temperature sensor pin B)
			3	T4A	第 4 个温度传感器 A 管脚（Fourth temperature sensor pin A）
			4	T4B	第 4 个温度传感器B 管脚（Fourth temperature sensor pin B）
			1	LED-	LED指示灯负极


P4	A1254WF-4A	强启放电开关 (Force start the discharge switch)			(LED indicator positive)
			2	LED+	LED指示灯正极 (LED indicator negative)
			3	K-	按键开关负 (Key switch negative)
			4	K+	按键开关正 (Key switch positive)
P5	A1254WF-4A	强启加热开关 (Force start the heating switch)	1	LED-	LED指示灯负极 (LED indicator positive)
			2	LED+	LED指示灯正极 (LED indicator negative)
			3	K-	按键开关负 (Key switch negative)
			4	K+	按键开关正 (Key switch positive)
P6	A1254WF-2A	充电检测接口 (Charge detection interface)	1	C-	充电检测负 （Charge detection negative）
			2	C+	充电检测正 （Charge detection positive）
P7	A1254WF-4A 选配 (Optional)	通讯接口 (Communication interface)	1	RS485-B	RS485信号负极(Negative terminal of RS485 signal)
			2	RS485-A	RS485信号正极(RS485 signal positive terminal)
			3	CAN-H	CAN信号正极(CAN signal positive terminal)
			4	CAN-L	CAN信号负极(CAN signal negative terminal)
P8	A1254WF-6A	显示屏 接口 (Display interface)	1	VCC	显示屏电源输出 (Display power output)
			2	A	显示屏RS485信号正极 (The display RS485 signal is positive)
			3	B	显示屏RS485信号负极 (Display RS485 signal negative)
			4	GND	电源负极 (Negative terminal)
			5	K+	激活信号正极 (Activate the positive signal)
			6	K-	激活信号负极

					(Activation signal negative electrode)
P9	1.25T-4PWT	UART接口 (UART interface)	1	VGPS	电源输出，电压与B+接近 (Power output, the voltage is close to B+)
			2	TX	UART_TX,3.3V
			3	RX	UART_RX,3.3V
			4	GND	电源/信号地 (Power/signal ground)
P10	A1254WF-2A 选配 (Optional)	报警接口 (Alarm interface)	1	V+	报警电源输出12V正极 (Alarm power output 12V positive)
			2	V-	报警电源输出12V负极 (Alarm power output 12V negative electrode)
P11	M3加热线 (M3 heating line)	加热线(Heating line)	1	HT-	加热器件负极 (Heater element negative electrode)
P12	M3-PCB端子 (M3-PCB terminals)	电源输入 (Power input)	1	B+	电源输入正极 (The power input is positive)
D1	蓝牙连接指示灯，当蓝牙连接上保护板时指示灯常亮，断开连接时指示灯闪烁。(Bluetooth connection indicator: When the Bluetooth is connected to the protection board, the indicator is steady on, and when the connection is disconnected, the indicator is blinking.)				
P-	接外部负载或者充电器负极 (Connect to external load or negative terminal of charger)				
B-	接电池负极(Connect to the negative battery terminal)				

5.2. 产品尺寸(Product size)

JK-QB2A8S-20P系列保护板尺寸为 227mm×120mm×21.12mm如下图所示：


The size of JK-QB2A8S-20P series protection board is 227mm×120mm×21.12mm as shown in the following figure：

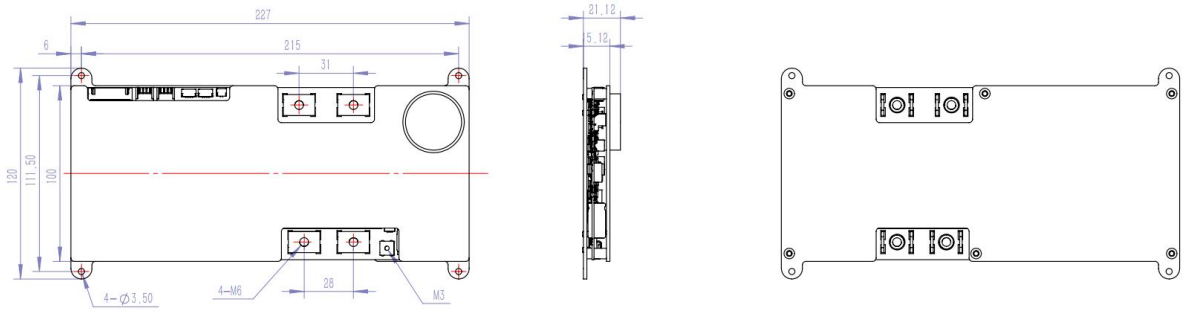



JK-QB2A8S-20P 外形尺寸

Dimensions of JK-QB2A8S-20P

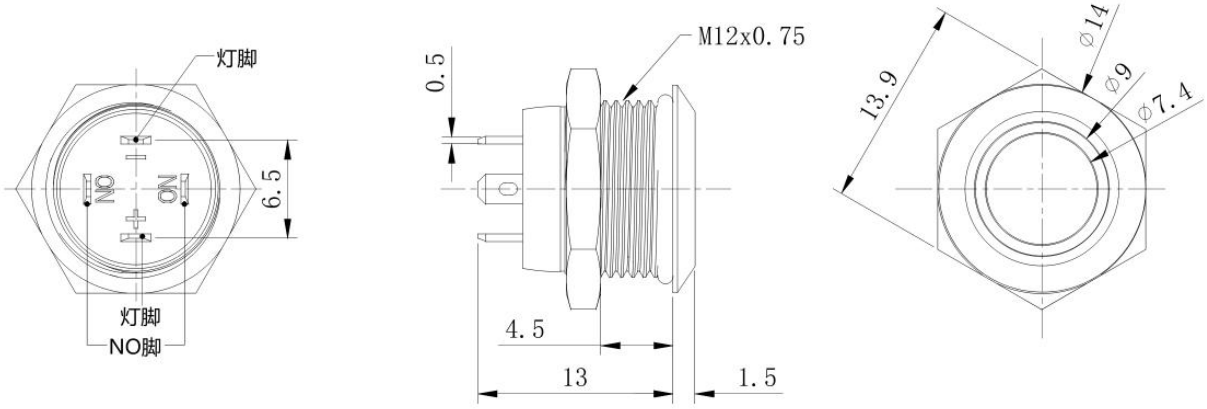


激活开关尺寸

Activate switch size

5.3. 安装方法 (Installation method)

JK-QB2A8S-20P系列保护板适用于3-8串的的锂电池组，不同电芯数量的电池组接线方法不同，具体接线方式如下图所示。

JK-QB2A8S-20P series protection board is suitable for 3-8 series of lithium battery pack, different cell number of battery pack wiring methods are different, the specific wiring method is shown in the following figure.

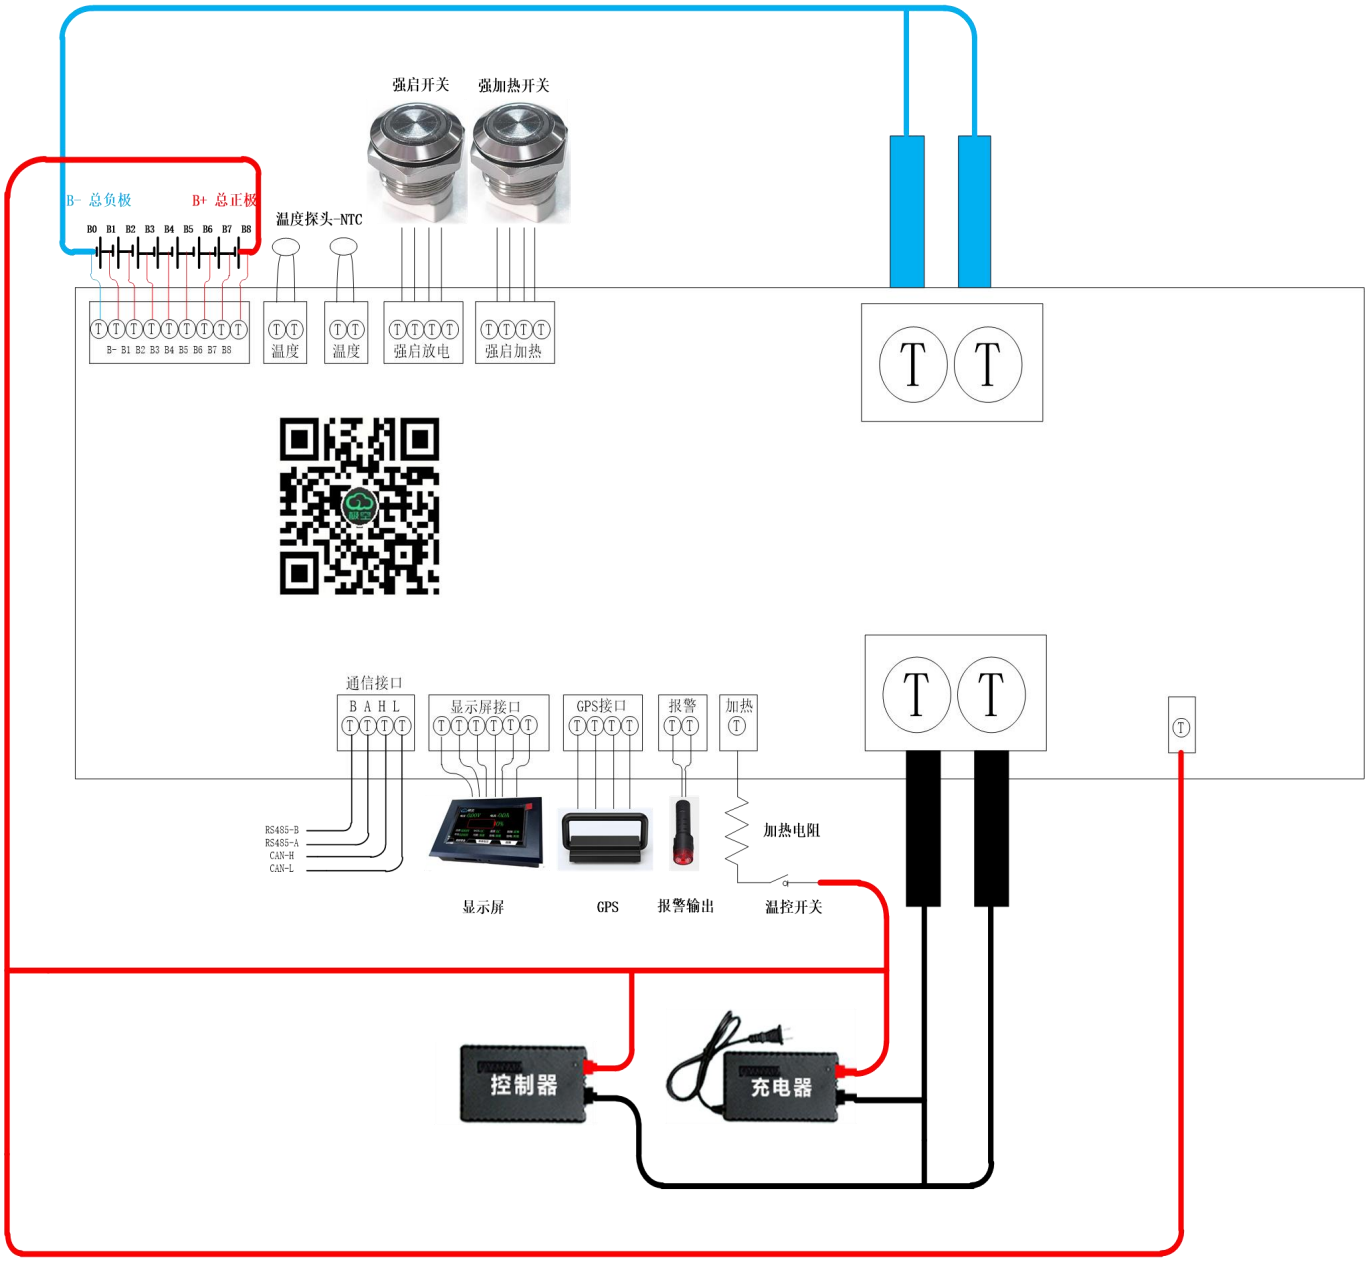

JK-QB2A8S-20P 接线图

JK-QB2A8S-20P wiring diagram

6. 设备使用说明(APP operation Instructions)

6.1. APP安装（APP installation）

通过扫描下图所示的二维码可以获取与产品配套的手机APP

Mobile APP matching the product can be obtained by scanning the QR code shown in Figure . Android Version 7 minimum is required for the Android APP.

手机APP 链接二维码

Mobile APP link QR code

6.2. 设备激活(Device activation)

在保护板开机之前，请再次确认均衡线连接是否正常，“ P-”与“B-”是否连接正确。检查保护板是否已经稳妥的与电芯固定，确认无误后才可以接通给保护板上电，否则可能造成工作异常、甚至烧毁等严重后果。

确认上述操作无误以后，可以给保护板上电。保护板没有上电控制开关，设计为充电激活模式(充电器电压比电池电压高 2V)，即电池组装完成以后需要接上充电器让保护板开机工作。

保护板激活除了充电激活以外还支持按键激活以及显示屏激活,选配显示屏以及按钮的用户只需将线缆插入显示屏接口，按下按键即可激活。

Before starting the protection board, check whether the balance cable is properly connected and whether P- and B- are correctly connected. Check whether the protection board has been securely fixed with the battery core, and confirm that it is correct before you can switch on the protection board, otherwise it may cause serious consequences such as abnormal work and even burning.

After confirming the preceding operations, power on the protection board. The protection board has no power-on control switch, and is designed for charging activation mode (the charger voltage is 2V higher than the battery voltage), that is, after the battery assembly is completed, the charger needs to be connected to make the protection board work.

In addition to charging activation, the protection board also supports key activation and display activation. Users who choose the display screen and button only need to insert the cable into the display interface and press the button to activate.

6.3. 参数设置(Parameter setting)

详见“保护板参数设置说明”。

Please refer to the "Instructions for Setting Protection Board Parameters" for details.